

SureSink™ TUBING KIT

Installation Instructions

3/8" PARTS INCLUDED

Kit 773380 (100')

Description	Qty
3/8" diameter SureSink™ Aeration Tubing	1
3/8" barb x 3/8" barb fitting	1
3/8" tubing clamp	2

5/8" PARTS INCLUDED

Kit 773580 (100')




Description	Qty
5/8" diameter SureSink™ Aeration Tubing	1
3/8" barb x 5/8" barb fitting	2
5/8" barb x 5/8" barb fitting	1
5/8" tubing clamp	2
3/8" tubing clamp	2

TOOLS REQUIRED

- 5/16" socket or driver
- 1/4" socket or driver
- 9/32" socket or driver
- Flat-head screwdriver
- Utility razor knife or tubing cutter

NOTE Depending on individual installations, not all fittings will be used. Please see illustrations for fittings needed.

INSTRUCTIONS

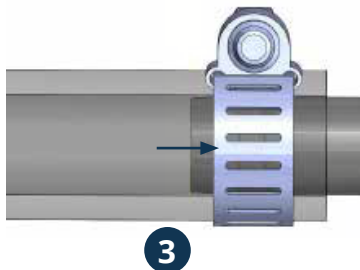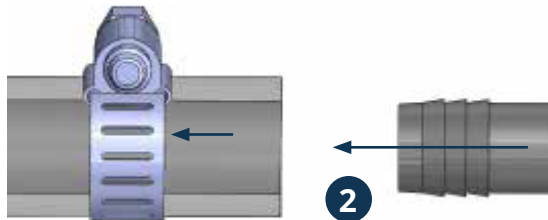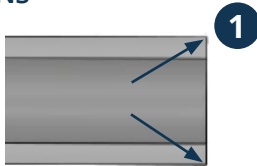

1. Trim hose square. Outer diameter must be free of score marks, burrs, and sharp edges.
2. Loosely slide tubing clamp onto tubing. Insert tubing over barb fitting. Tubing must completely cover barbed portion of fitting.
3. Slide tubing clamp over tubing and barbed portion of the fitting. Tighten clam using a socket/driver or flat-head screwdriver.

SureSink™ SPLICE CONNECTION

